


SPRINTER (906)

06/2006 ->

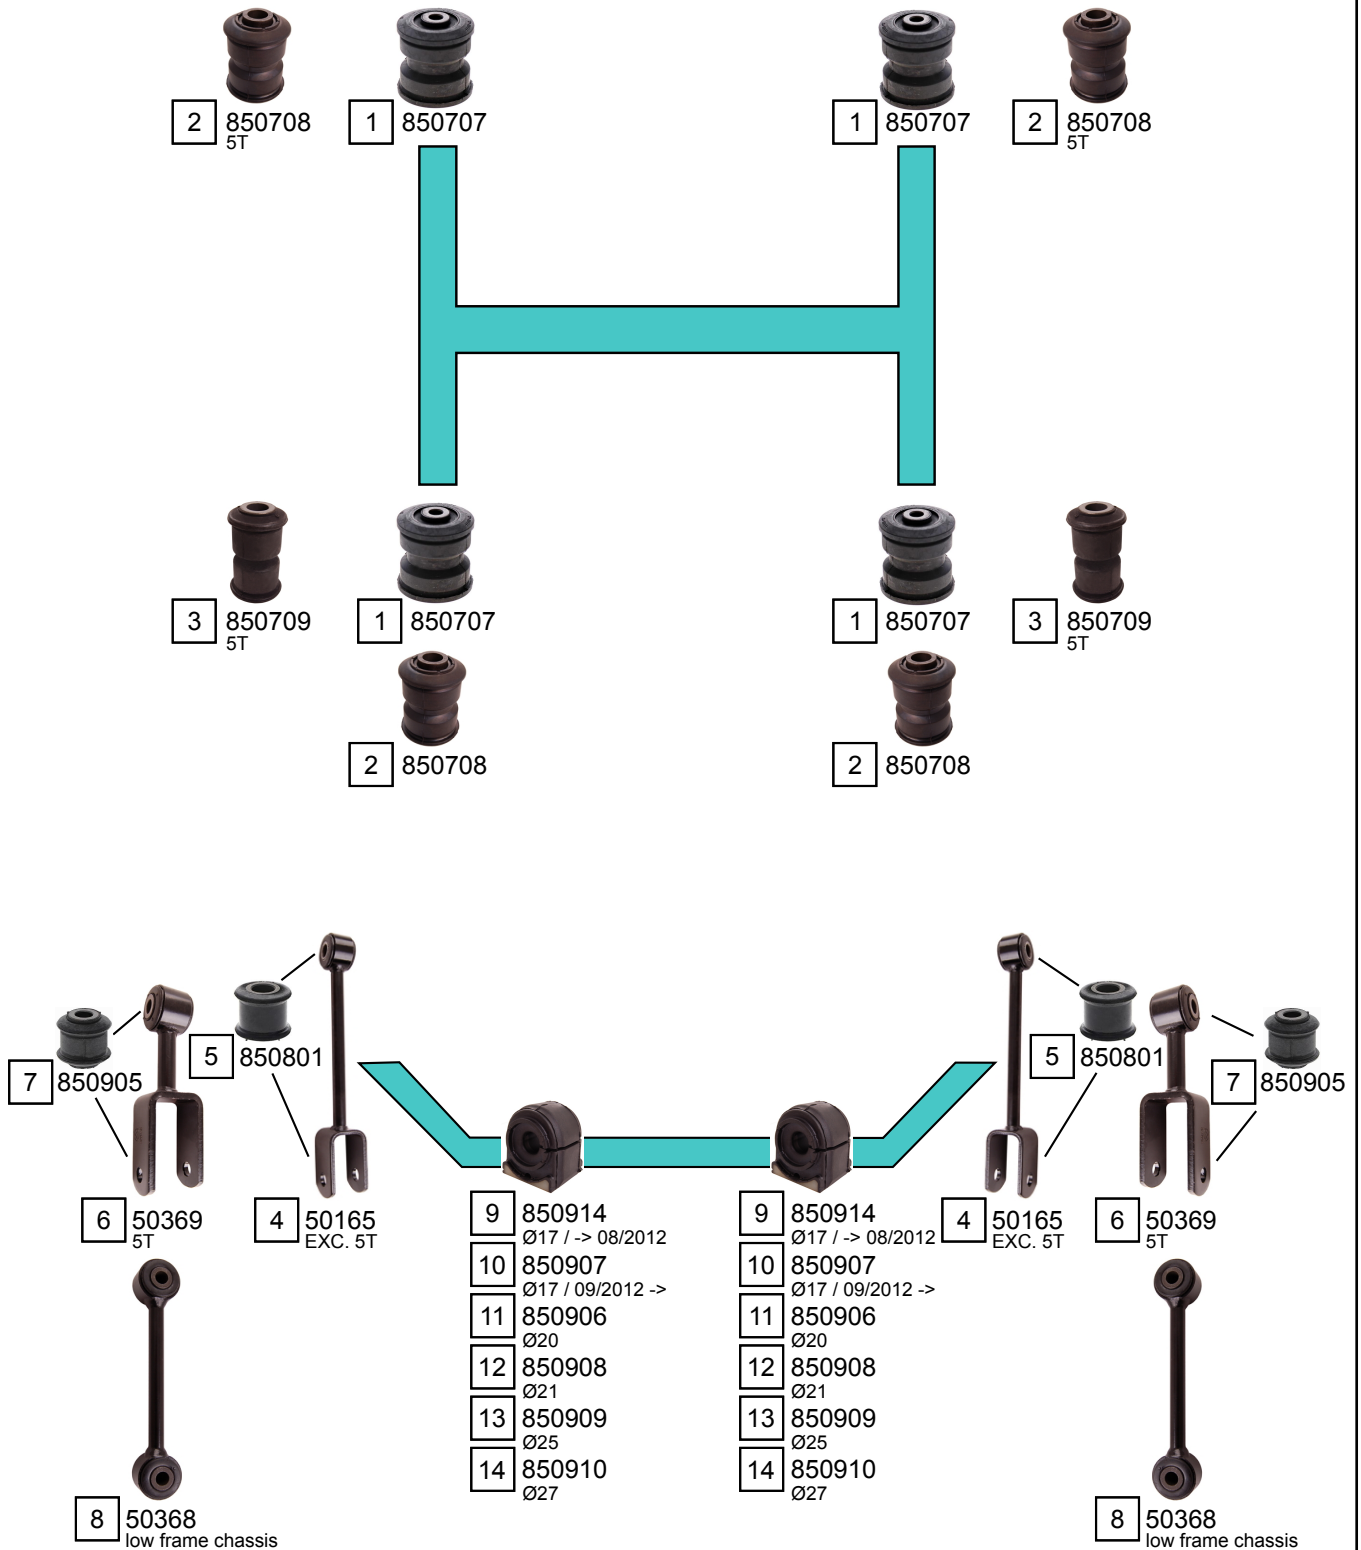

Ref.	Sidem Ref.	Description	OE-number	Measures	Ref.	Sidem Ref.	Description	OE-number	Measures
1	850707	spring bush	906 324 00 50	di:12.1 do:63	8	50368	stabilizer link rear axle	906 326 11 16	L:155
2	850708	spring bush	611 324 03 50	di:16.1 do:50	9	850914	stabilizer mounting	906 326 07 81	di:15.5
3	850709	spring bush	000 321 02 50	di:16.1 do:39	10	850907	stabilizer mounting	906 326 21 81	di:11.5
4	50165	stabilizer link rear axle	906 320 13 89	L:213	11	850906	stabilizer mounting	906 323 35 85	di:16
5	850801	stabilizer mounting	601 321 03 50	di:12	12	850908	stabilizer mounting	906 326 22 81	di:18
6	50369	stabilizer link	906 320 14 89	L:140	13	850909	stabilizer mounting	906 326 23 81	di:22
7	850905	stabilizer mounting	667 320 00 73	di:12.1	14	850910	stabilizer mounting	906 326 24 81	di:25