


SPRINTER (906)

06/2006 ->

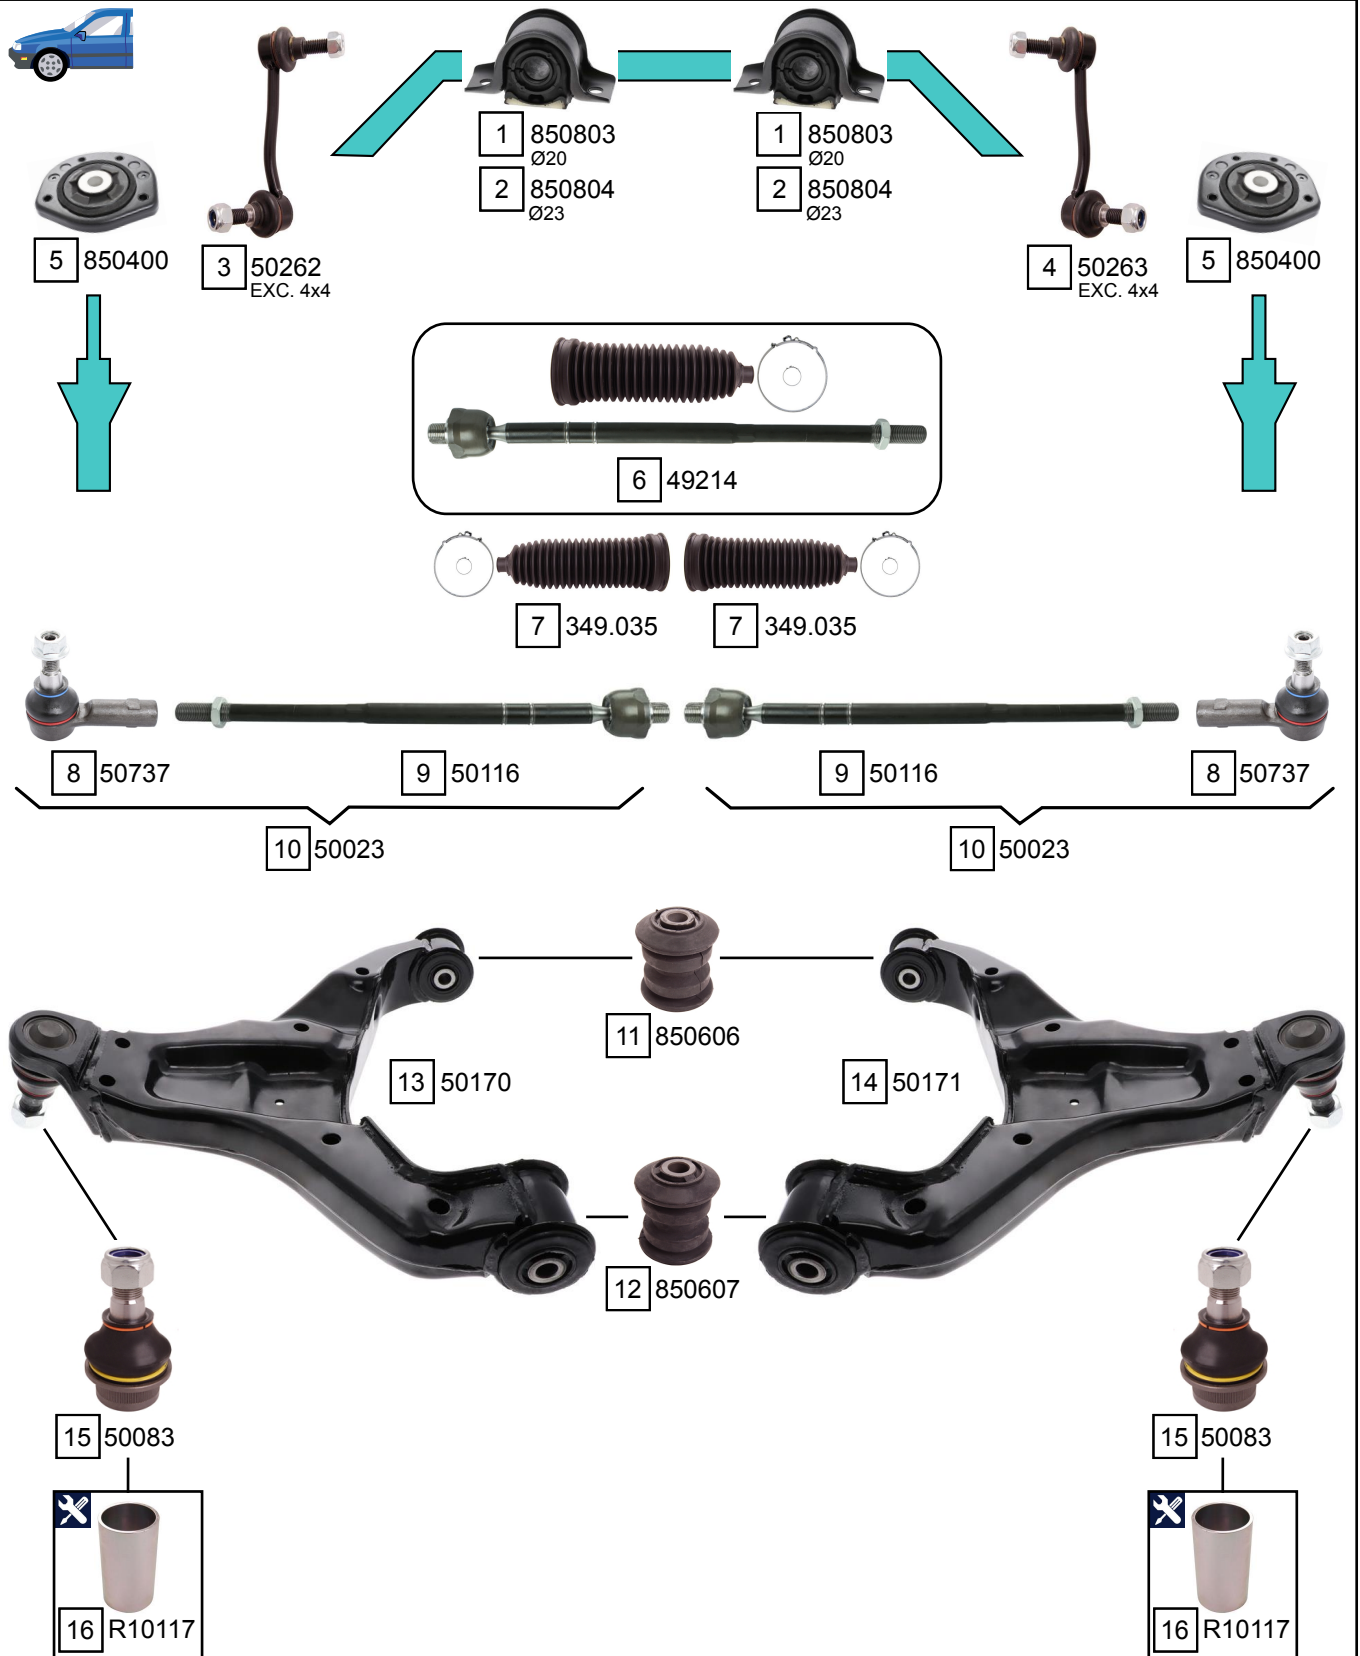

Ref.	Sidem Ref.	Description	OE-number	Measures	Ref.	Sidem Ref.	Description	OE-number	Measures
1	850803	stabiliser mounting	906 323 35 85 S1	di:16.5	9	50116	axial joint	Part of	th:MM18X1.5R L:400
2	850804	stabiliser mounting	906 323 36 85 S1	di:21	10	50023	tie rod	906 460 03 48 S1	c:16.8
3	50262	stabiliser link left	906 320 17 89	L:138	11	850606	silentblock for TCA	906 333 00 14	di:14.2
4	50263	stabiliser link right	906 320 18 89	L:138	12	850607	silentblock for TCA	906 333 01 14	di:14.2
5	850400	strut mount	906 323 05 20	di:16.4 L:46	13	50170	TCA left wbj	906 330 40 07	c:21.9
6	49214	axial joint kit	906 460 01 55	D:67 th:MM16X1.5R	14	50171	TCA right wbj	906 330 41 07	c:21.9
7	349.035	steering rack gaiter	164 460 00 96	D:67 d:16 L:218	15	50083	ball joint	Part of	c:21.9 do:45.3
8	50737	tie rod end	906 460 03 48	c:16.8 th:FM16X1.5R	16	R10117	mounting tool ring long ø64	SEE PAGE III	di:56 do:64